



OUTLET/CULVERT PLAN VIEW
FIGURE 1

1. PREPARE SOIL BEFORE INSTALLING EROSION CONTROL PRODUCTS, INCLUDING ANY NECESSARY APPLICATION OF LIME, FERTILIZER, AND SEED.
2. INSTALL TURF REINFORCEMENT MAT (TRM) OVER PREPARED SOILS ACCORDING TO TRANSITION MAT SPECIFICATION.
3. PLACE TRANSITION MAT OVER THE INSTALLED TRM. TRANSITION MAT CAN BE LAID IN EITHER DIRECTION.
4. PLACE STAPLES/ANCHORS IN THE APPROPRIATE PATTERN AS RECOMMENDED BY THE MANUFACTURER.

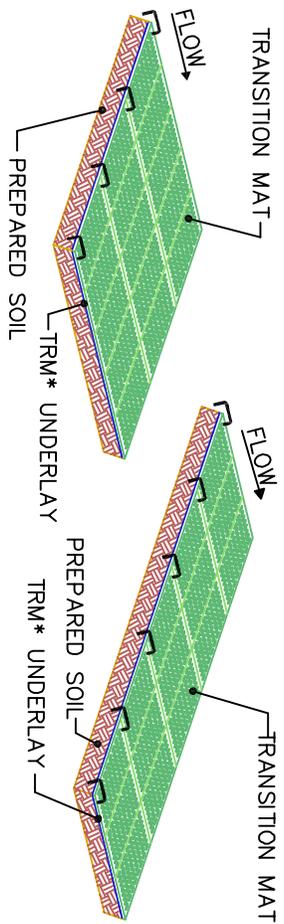

LEADING EDGE ANCHORING
FIGURE 2

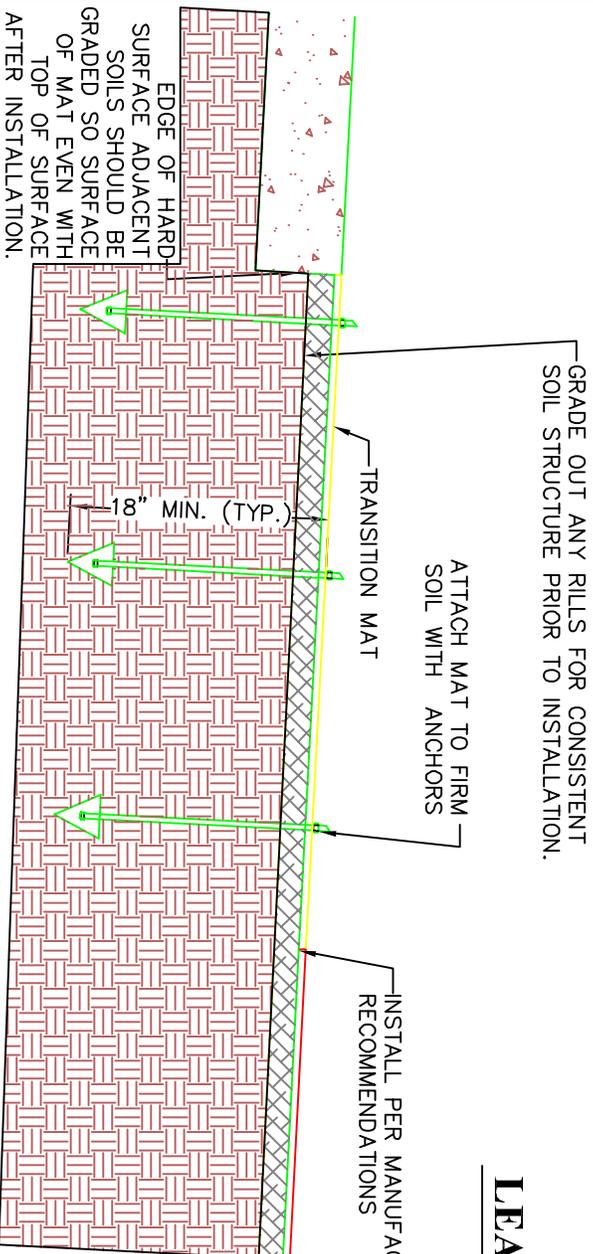

- GRADE OUT ANY RILLS FOR CONSISTENT SOIL STRUCTURE PRIOR TO INSTALLATION.
- ATTACH MAT TO FIRM SOIL WITH ANCHORS
- INSTALL PER MANUFACTURERS RECOMMENDATIONS


Greenville County
Storm Water Management

TRANSITION MAT

STANDARD DRAWING NO. **FC-09**

APPROVED BY: GREENVILLE COUNTY STORM WATER MANAGEMENT January, 2013
DATE